

Mögliches Fehlercodes Vogue e-Bikes und Vogue Lastenfahrräder:



INTELLIGENT 800 S - KEY DISP KD21C - INTELLIGENT




Error code	Error Beschrijving	Error controleren
"01"	Communication Error	Check the cable connection
"02"	Controller Protection	Check three-phase power line
"03"	Three-Phase power error	Check three-phase power line connection
"04"	Battery low	Charge the battery
"05"	Brake error	Check the brake connection
"06"	Turn error	Check turn to connect
"07"	Hall error	Check the hall collection

BAFANG C07.UART - BAFANG DP C10.UART



Error code	Error Beschrijving	Error controleren
"03"	Brake enabled	Check whether a brake cable is stuck
"04"	The throttle has not returned position	Check if throttle has returned position
"05"	Throttle fault	Check the throttle
"06"	Low voltage protection	Check the battery voltage
"07"	Overvoltage protection	Check the battery voltage
"08"	Motor hall signal cable fault	Check the motor module
"11"	Controller temperature sensor failure	Check the controller
"12"	Current sensor failure	Check the controller
"13"	Battery temperature fault	Check the battery
"21"	Speed sensor fault	Check installation position of speed sensor
"22"	BMS communication fault	Replace the battery
"30"	Communication fault	Check the controller connection

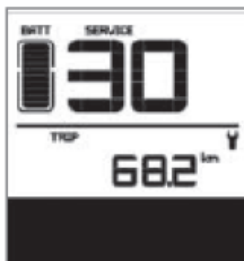

Note: Error Code 10 will probably appear on the display when the e-bike is climbing for a long time. This indicates that the motor temperature has reached the protection value, in which case the user needs to stop the e-bike for a rest. If the user continues to run the e-bike, the motor will automatically cut off the power.